




TECHNICAL DATA SHEET

RIGGING SLEEVE ASSEMBLY PROCEDURE



AXIS
ANCHOR PRODUCTS

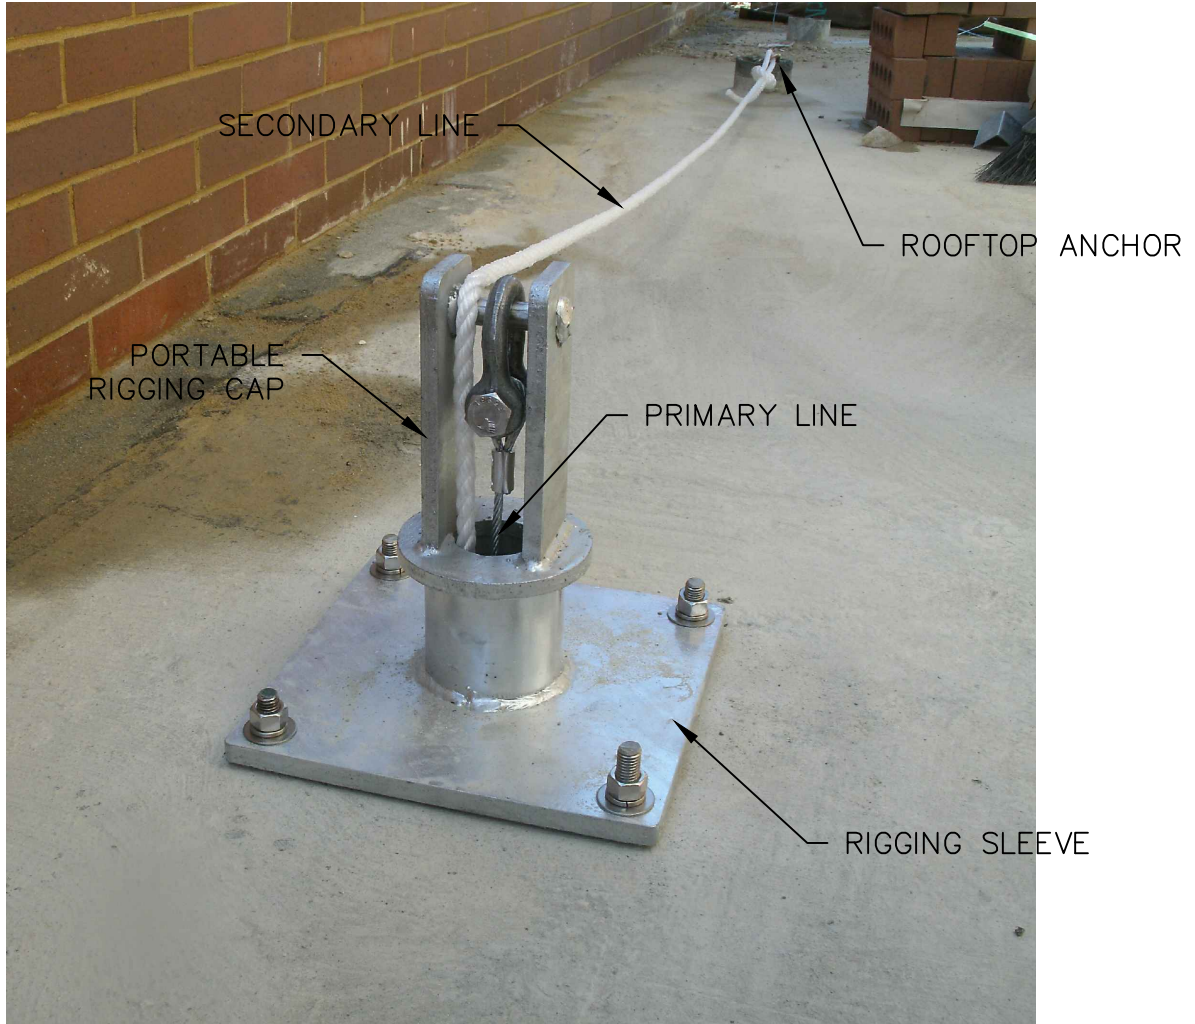


RIGGING SLEEVE USAGE NOTES

1. PRIMARY SUSPENSION LINE MUST ONLY BE ATTACHED TO THE $\frac{3}{4}$ " BAR ON THE PORTABLE RIGGING CAP.
2. ALL WORKERS MUST BE TRAINED BY A COMPETENT INDIVIDUAL PRIOR TO USING THIS EQUIPMENT.
3. INSPECT ALL FASTENERS AND LOCKING PINS BEFORE USING. ENSURE THEY ARE IN PLACE, IN GOOD WORKING ORDER AND PROPERLY ENGAGED.
4. THE RATED CAPACITY OF THE HOIST MUST NOT EXCEED THE MAXIMUM ALLOWABLE LOAD OF 1,000 LBS.
5. EACH WORKER'S SAFETY LIFELINE MUST BE ATTACHED TO A CERTIFIED ANCHORAGE, INDEPENDENT OF THIS ENTIRE ASSEMBLY.
6. DO NOT REPAIR OR MODIFY THIS EQUIPMENT. ALL REPAIRS MUST BE PERFORMED BY AN AUTHORIZED ROOFTOP ANCHOR, INC. REPRESENTATIVE.
7. TO ENSURE THAT ALL PARTS OF THE EQUIPMENT ARE IN SAFE OPERATING CONDITION, ALL STRUCTURAL, ELECTRICAL AND MECHANICAL EQUIPMENT SHALL UNDERGO INSPECTION, TESTING AND SERVICING PRIOR TO USE IN ACCORDANCE WITH THE MANUFACTURER'S RECOMMENDATIONS AND OSHA 1910.66, ASME A-120.1-2001, ANSI 1-14.1.
8. IF PARAPET OR GUARDRAIL IS LESS THAN 42" HIGH, WORKERS MUST UTILIZE PROPER FALL PROTECTION MEANS WHILE TRANSPORTING AND ERECTING RIGGING SLEEVE SYSTEM.

ROOFTOP ANCHOR

PROPRIETARY AND CONFIDENTIAL
The information contained in this drawing is the sole property of Rooftop Anchor, Inc. Any reproduction in part or as a whole without written permission of Rooftop Anchor, Inc. is prohibited.

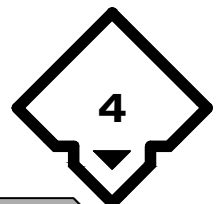

EFFECTIVE: JANUARY 2016